




External Siren & Strobe Assembly Instructions

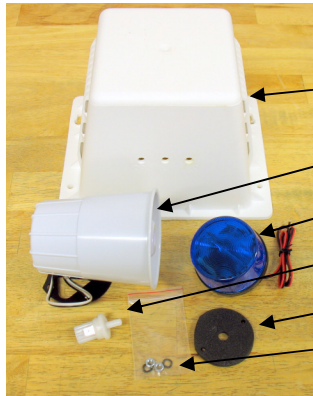




Siren Kit Parts

- *Siren Cover
- *Horn Speaker
- *Strobe Light
- *Tamper Switch
- *Gasket
- *Siren Washers & Nuts


1. Fit Gasket to Strobe Light

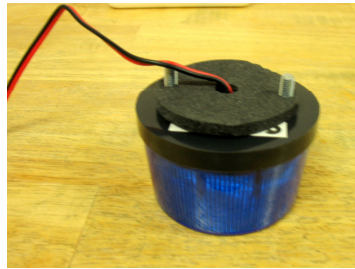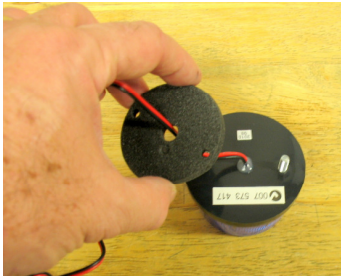

2. Thread wire through Siren Cover hole and secure screws with washers & nuts

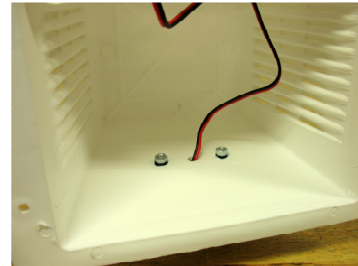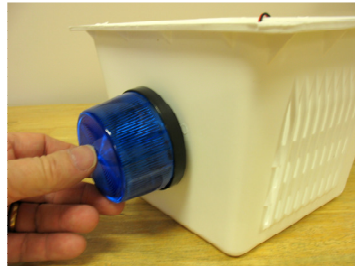
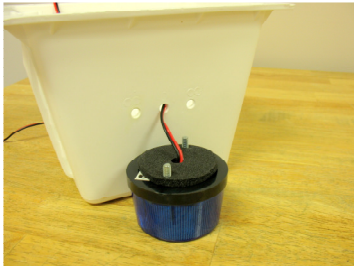


3. Slide Horn speaker in to siren cover

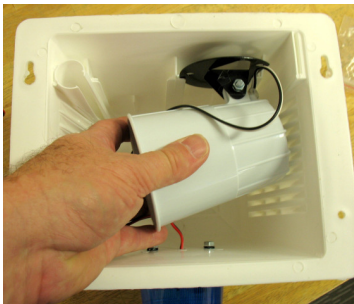


4. Connect up the Tamper switch

- The black/white wire from the siren and the blue wire from the cable going back to the panel gets connected to the tamper switch via spade connectors*.
- The White wire from the siren and the white wire from the cable going back to the panel gets connected to the terminal strip
- The Red and black wires from the strobe light and the red and black wires from the cable going back to the panel get's connected to the terminal strip

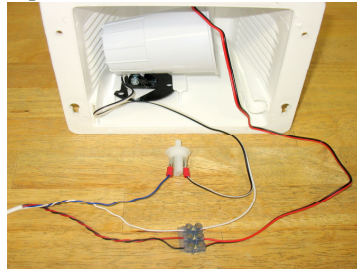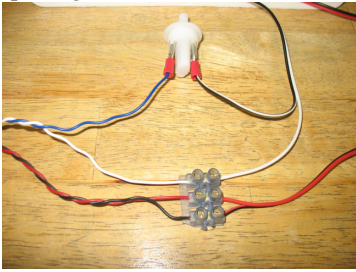

5. Fit Tamper Switch in the siren box

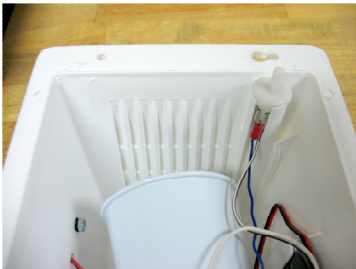

6. Your Siren is now ready to fit to the wall or eve.

***Note – terminal strip and spade connectors are NOT provided in the siren kit, you can purchase these from The Technoworx Store separately or from your local hardware store.**